






SG-5 **OPERATING INSTRUCTIONS & USER MANUAL**



PARTS LIST

- A Ergonomic Handle
- B Umbrella Holder Base
- C Scorecard Holder
- D Upper Adjustable Bag Straps
- E Main Upper Frame Tube
- F Rear Wheel
- G Left Foot Brake
- G1 Right Foot Brake
- H Stabilizer Tube
- I Folding Lever
- J Lower Adjustable Bag Straps
- K Front Wheel Assembly
- L Handle Lever
- M Handle Tube
- N Main Lower Frame Tube
- O Slide Levers
- P Umbrella Holder
- Q Sand Bucket Hook

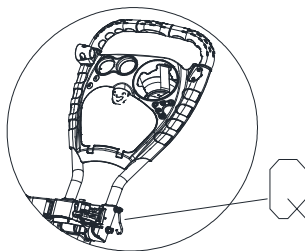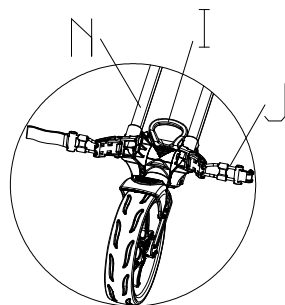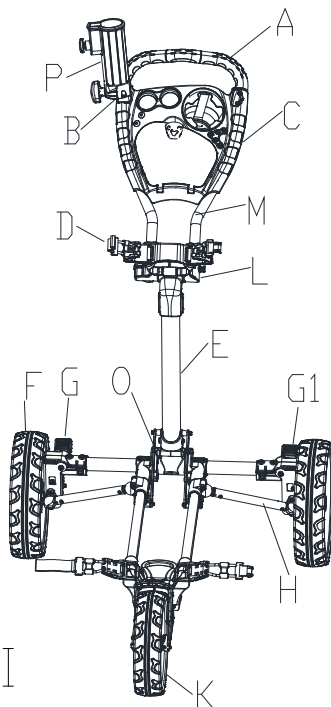

MAINTENANCE


To clean the buggy, wipe with a soft, damp cloth. Avoid using harsh chemicals to clean. Lubricate moving parts every 6 months.

WARNING:

For your own safety, please read and understand the following warnings and keep this user guide for future reference.

1. Always make sure the buggy is fully extended and locked before use.
2. Always make sure the buggy is folded and locked properly before lifting or transporting.
3. Do not run while using this product.
4. Do not use accessories other than those designed for use with this cart.
5. Keep all packing materials away from children and recycle where possible or where required by law.


UMBRELLA HOLDER

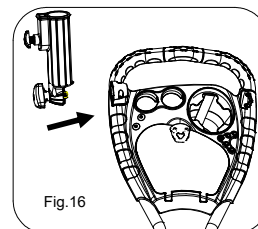

To install:
Simply attach the umbrella holder
onto the buggy as in Fig. 16.



STINGER SG-5

UNFOLDING THE BUGGY

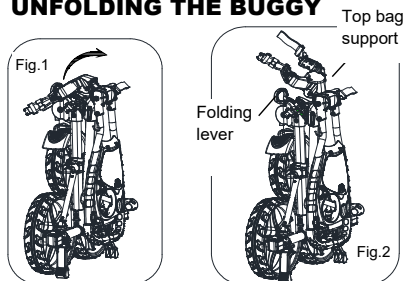


Lift the top bag support as Fig.1.

Hold the top bag support to pull the folding lever as Fig.2 to open the lower frame as Fig.3, and then click the upper frame into the frame lock as Fig.4.

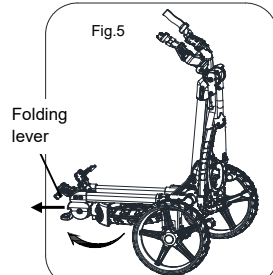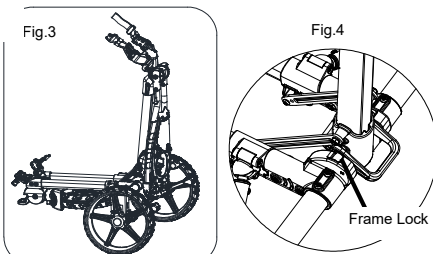


Pull the folding lever and rotate the front wheel clockwise as Fig.5.

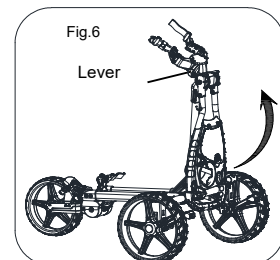


Open the lever and adjust to desired handle height, then lock the lever as Fig.6.



FOLDING THE BUGGY

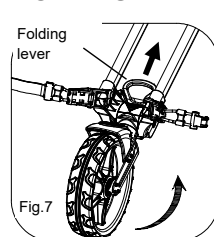



Pull the folding lever to rotate the front wheel anticlockwise as Fig.7.

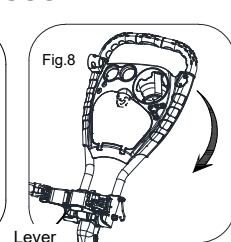

Open the lever to fold the handle down to touch the lower frame, then lock the lever as Figs. 8 & 9.

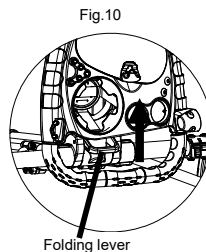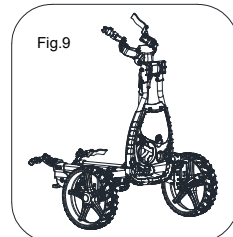


Pull the frame lock lever to fold the lower frame as Figs.10 & 11.

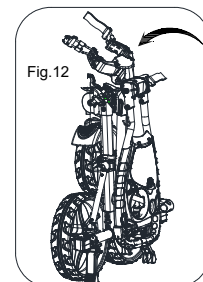
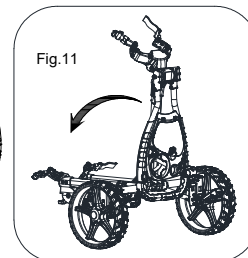


Fold down the top bag support as Fig.12.

FOOT OPERATED BRAKE

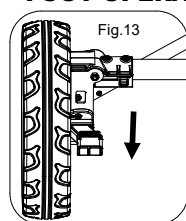

Press down to activate the brake and pull up to release the brake as Fig.13.

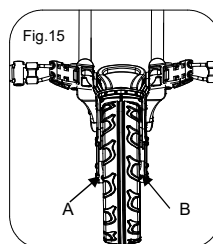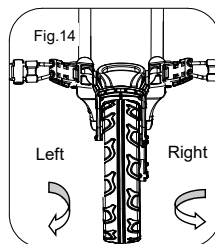

FRONT WHEEL ADJUSTABLE SYSTEM



Allen Key

- 1.If the buggy veers to the left, face the front wheel of the buggy and use the allen key provided to adjust A point screw clockwise or the B point screw bolt counterclockwise until the front wheel is centered between the front fork.(Fig.14)
- 2.If the buggy veers to the right, face the front wheel of the buggy and use the allen key provided to adjust A point screw counterclockwise or the B point bolt clockwise until the front wheel is centered between the front fork.(Fig.15)



EXCEEDING IMAGINATION IN QUALITY & PRICE

www.stingergolf.com.au

info@stingergolf.com.au